

1000 Foot Range 2 Channel Wireless Intercom



Item # ats4530
Ships in 2 business days

- Communicate two ways or one way with audio monitoring
- Monitor someone in another room
- No more shouting from room to room
- 1000 foot range
- Package includes 2 intercom units

Only \$69.99 + Sales Tax /Shipping

*Price subject to change without notice

30 day return period – 1 year Manufacturer Warranty

Description

This Wireless Intercom System provides you the ability to easily monitor a loved one who might need you during the night, or listen in to the baby in another room – solution for room to room monitoring.

This Wireless Intercom System is also a great home or office intercom system making it easy to speak to someone in another room without having to get up or go back and forth, from room to room.

It is great for caregivers - no more ringing the bell to call for assistance.

Q: *“It is called 'wireless' but is still plugged into the electricity, what is that?”*

Some intercom systems require dedicated wiring between intercom units. This system uses the wiring in your home to send the signal from monitor to monitor. No need to run special wires. You can move this system from room to room any time you need to.

By using your existing wiring in your home or office the signal range is improved and provides the ability to talk to someone up to 1000 feet away.

- 2 communication channels to choose from.
- Excellent sound clarity.
- An affordable solution to a communication problem.
- No Installation Required
- No batteries Required
- Simply plug in both intercom units and set them to the same channel.
(Units must be plugged into outlets on the same electric panel.)

How it works:

- Press Call to page another room.
- Press Talk to converse.
- Press Lock for continual monitoring.
- Expandable up to 4 more units. (Please note: if you have more than two units, every unit will participate in the same signal broadcast, unless they are on different channels. This means that there will be no privacy, as every unit will broadcast the conversation.)

Special Notes:

The range of the wireless intercom may vary due to the age and condition of your electrical wiring.

Dimensions 5½" x 5½"

Product Weight 2½ lb

One Year Manufacturer's Limited Warranty


Batteries / Electric: Uses 110V AC power

The wireless intercom is based upon signals sent through the electric wiring (they must be on the same circuit panel). Room additions sometimes are not on the same electric circuit panel or the panel might be divided and the unit may not perform as expected.

May not be compatible with all GFI (grounded) outlets.

You cannot use the wireless intercom to connect neighboring houses and/or apartments.

Professional Ratings UL Listed

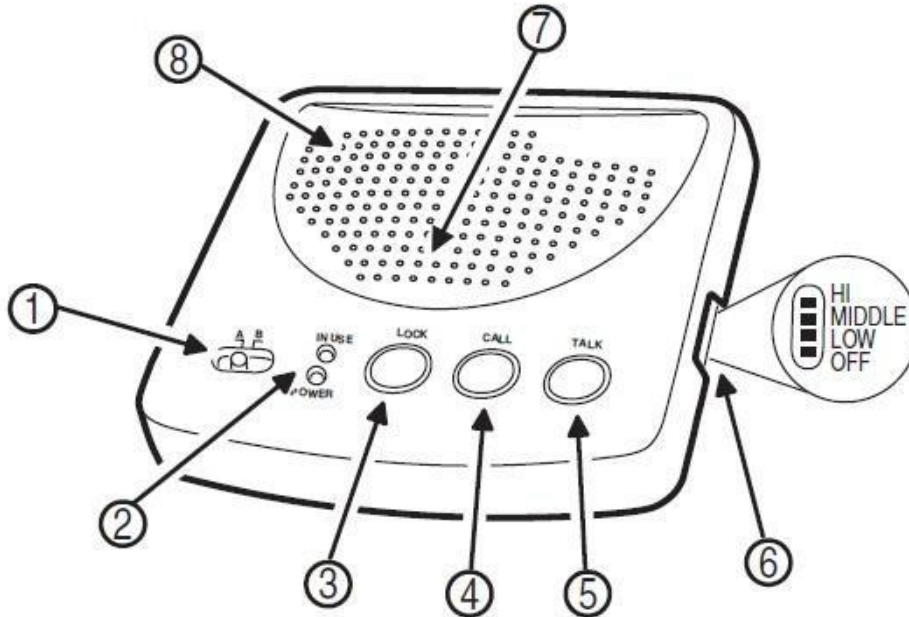

1. **CHANNEL SELECTOR**
Allows you to select between channels.
2. **IN USE & POWER INDICATORS**
Lights when intercom is activated, lights when AC power is on.
3. **LOCK BUTTON**
Press down for continuous monitoring.
4. **CALL BUTTON**
Pages other units on the same channel.
5. **TALK BUTTON**
Press to talk. Release to listen.
6. **POWER/VOLUME SWITCH**
Turns unit on and off, controls volume.
7. **MICROPHONE**
High-gain microphone monitors your voice.
8. **SPEAKER**
Clearly transmits pure, static-free, two-way voice communication.



ORDER FORM

Assistive Technology Services

"Helping You Live Independently"

8023 Franklin Road
 Murfreesboro TN 37128
 Phone: (615) 562-0043

Billing Address Name _____ Address _____ City _____ State _____ Zip _____ Phone _____	Check if Ship to is same as Billing <input type="checkbox"/>	Ship To Address Name _____ Address _____ City _____ State _____ Zip _____ Phone _____
--	---	--

CUSTOMER EMAIL ADDRESS		PAYMENT TERMS		DATE
		Due on receipt		

QTY	ITEM #	DESCRIPTION	UNIT PRICE	SHIPPING	UNIT TOTAL
	ats4530	2 Channel Wireless Intercom	69.99	6.87	
		(package includes 2 intercoms)			
				Subtotal	
		Only applicable if shipping to Tennessee		TN Sales Tax 9.75%	
		*Prices are subject to change without notice		Shipping	
				Total	

If paying by check - make checks payable to: Assistive Technology Services

Credit Card Type	Credit Card Number	Expiration Month	Expiration Year	Security Code (back)
Visa <input type="checkbox"/> MC <input type="checkbox"/> AmEx <input type="checkbox"/> Disc <input type="checkbox"/>				
	Name On Card:	Billing Email Address:		

"May You Know The Glory Of God And May He Bless You"